
RHINOX
XTREME PERFORMANCE

HOW TO MEASURE PIN DIMENSIONS


1. MEASURE THE PIN DIAMETER

Measure the **widest part of the bucket pin** (ideally with vernier callipers) or the inside of the hanger hole. Account for wear if the bucket is old.

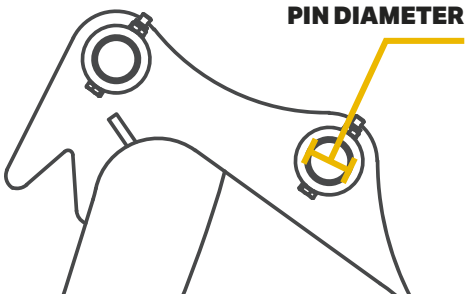


2. MEASURE THE DIPPER GAP

Measure the **smallest internal size of the dipper gap** (the space between the bucket hangers), typically found between the bosses. Use a tape measure or ruler. Only measure the outside width of the bucket link if necessary, as this may be less accurate due to wear.

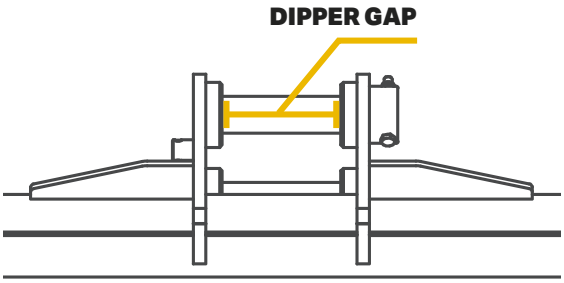

3. MEASURE THE PIN CENTERS

Measure the **distance between the two bucket pin centers.** The easiest way to get this measurement is to measure from the front edge of one pin hole to the front edge of the other pin hole using a ruler or tape measure, rather than trying to estimate the true center of each pin.

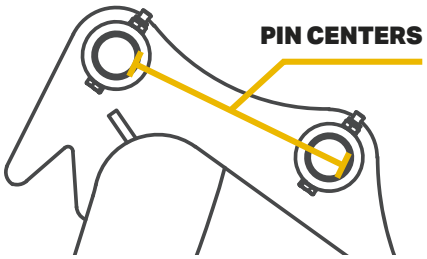

BUY WITH CONFIDENCE

Find the right fit now using our **Search by Pin Dimensions** tool on our website and rest assured that every order is protected by our unbeatable **Machine Fitment Guarantee.**

If still in doubt, contact us using the details below:

+1 267 861 0812

sales@rhinox-group.us

rhinox-group.us

MACHINE FITMENT GUARANTEE